

## DMX 512 Configurations

### 5/6/8 Channels Mode:

DMX512 Configurations										
5 Channels Mode					6 Channels Mode					
Ch1	Ch2	Ch3	Ch4	Ch5	Ch1	Ch2	Ch3	Ch4	Ch5	Ch6
RED	GREEN	BLUE	WHITE	ZOOM	RED	GREEN	BLUE	WHITE	DIMMER	ZOOM
<div><div></div><div>0255</div><div>0%100%</div></div>	<div><div></div><div>0255</div><div>0%100%</div></div>	<div><div></div><div>0255</div><div>0%100%</div></div>	<div><div></div><div>0255</div><div>0%100%</div></div>	<div><div></div><div>0255</div><div>0%</div><div><div></div></div></div>	<div><div></div><div>0255</div><div>0%100%</div></div>	<div><div></div><div>0255</div><div>0%100%</div></div>	<div><div></div><div>0255</div><div>0%100%</div></div>	<div><div></div><div>0255</div><div>0%100%</div></div>	<div><div></div><div>0255</div><div>0%100%</div></div>	<div><div></div><div>0255</div><div>0%</div><div><div></div></div></div>

8 Channels Mode							
Ch1	Ch2	Ch3	Ch4	Ch5	Ch6	Ch7	Ch8
RED	GREEN	BLUE	WHITE	COLOR	DIMMER	STROBE	ZOOM
<div><div></div><div>0255</div><div>0%100%</div></div>	<div><div></div><div>0255</div><div>0%100%</div></div>	<div><div></div><div>0255</div><div>0%100%</div></div>	<div><div></div><div>0255</div><div>0%100%</div></div>	<div>248-255 Preset color32 241-247 Preset color31 233-240 Preset color30 225-232 Preset color29 217-224 Preset color28 210-216 Preset color27 202-209 Preset color26 194-201 Preset color25 186-193 Preset color24 179-185 Preset color23 171-178 Preset color22 163-170 Preset color21 155-162 Preset color20 148-154 Preset color19 140-147 Preset color18 132-139 Preset color17 124-131 Preset color16 117-123 Preset color15 109-116 Preset color14 101-108 Preset color13 093-100 Preset color12 086-092 Preset color11 078-085 Preset color10 070-077 Preset color9 062-069 Preset color8 055-061 Preset color7 047-054 Preset color6 039-046 Preset color5 031-038 Preset color4 024-030 Preset color3 016-023 Preset color2 008-015 Preset color1 000-007 Open</div>	<div><div></div><div>0255</div><div>0%100%</div></div>	<div>248~255 Open 240~247 Random Strobe 232~239 Open  190~231 Slow Close Fast Open  182~189 Open  140~181 Slow Open Fast Close  132~139 Open ⚡⚡⚡ 016~131 ⚡⚡⚡ ⚡ 008~015 Open 000~007 Off</div>	<div><div></div><div>0255</div><div>0%</div><div><div></div></div></div>