


User Manual

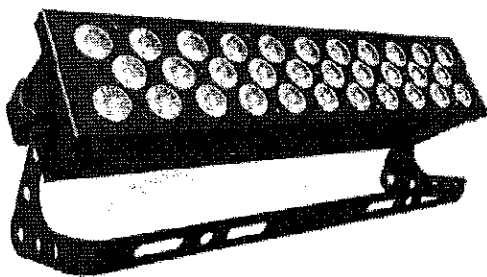

LCW 32*10W 5IN1

LED COLOR WASH

1. Product details-----	1
1. Specidification-----	1
1.2. Features-----	1
1. 3. Fast Instructions-----	2
1.4. Master Light-----	3
1.5. Master/slave-----	3
2. Operating Instructions-----	4
2.1. Keyboard Functions-----	4
2. 1. 1. Basic Instructions-----	4
2. 1. 2. Key Pass Word-----	4
2. 2. Menu Navigation-----	4
2. 3. Menu Description-----	6
2. 3. 1. Static Mode (STAT) -----	6
2. 3. 2. Auto Mode (AUTO) -----	6
2. 3. 3. Sound Control-----	7
2. 3. 4. DMX and Slave Mode (RUN) -----	7
2. 3. 5. DMX Setting (DMX) -----	7
2. 3. 6. DMX Mode Select (PERS) -----	8
2. 3. 7. ID Setting (ID) -----	8
2. 3. 8. Over-tempreature Protection (TEMP) -----	8
2. 3. 9. Scene Edit (EDIT) -----	9
2. 3. 10. Setting (SET) -----	9
2. 3. 11. White Balance Setting (CAL1) -----	10
2. 3. 12. Color Adjustment (CAL2) -----	11
2. 3. 13. Key Protection Setting (KEY) -----	11
2. 4. Controller Operation-----	11
2. 4. 1. DMX Channels-----	11
2. 4. 2. Color List-----	15
3. Edit Instructions-----	15

1. Product Details

1. 1. Specifications

Input Voltage: AC100-240V 50/60Hz

Power: 320W

LED: 32 pcs 10W 5-in-1 LED

Beam Angle: 25

Life: min 50,000 hours

Control Mode: DMX, Master/slave, Auto-run

DMX Modes: 7 DMX working modes

DMX channel: 12CH/3CH/4CH/5CH/6CH/7CH/3CH

IP Rating: IP20

Product Size: 575*115*115mm

N.W.: 5.0KG

1. 2. Features

■ 3 Control Modes

◆ External Control

DMX512 control (7DMX working modes)

Master/slave control

◆ Auto-run

Onboard Program

Various gradual, puls color change

Various strobe effects: speed change (slow to fast), mix(strobe+colors, strobe+color change).....

Editable Programs

Functional,useful editable programs. Programs can be edited without external controller. Programs like color change, step change, strobes, can be combined ramdonly.

Programs can be downloaded from master light

◆ Static Color Mode

A certain color can be set without a controller, and strobe on that color is available.

■ **"Light Cut Software"**

At "STAG" Mode, if the main dimmer is at value "0" when onboard program or edited program is working, the light will be off, while program is still working.

Difference to "BLACKOUT": it is just for the lights, no effect to the controller.

■ **ID Setting**

At "STAG" mode, Lights with the same ID (Max 66) can be controlled separately. Effects include: light up one by one, color change, strobe, gradual change, etc.

■ **Non-linear and linear dimming**

16 bit (60000 steps)

■ **White Balance**

white color at different color temperature

■ **Color Reset**

Software for adjusting the current.

■ **Display Protection**

Display will turn off if no work for 30 seconds, press any key to exit the protection mode.

■ **Over-temperature Protection**

A certain value of temperature can be set to protect the lights

■ **Pass word for button operation**

1. 3. Fast Instructions

■ **Mode change and setting**

◆ At main menu, all functions showing on display are under external DMX control.

◆ DMX512 is the default mode, the lights can only be controlled by DMX,

the 4th dot flickers. If not, check the connection.

- For choosing DMX Mode, press "MENU" until it shows "PERS", then press "ENTER" to confirm.

- 5 dimming speeds to determine the softness and degree. Press "SET"—"DIM" and the 11CH under "STAG" mode

- For choosing master/slave mode, Press "RUN" then choose "SLAV", then it receives data from master light or download edited program from master light.

- Make sure there is only one DMX controller or only one master light. With more than 2, the lights will not work properly due to the signal interference.

- ◆ Static Mode, press "STAT", then it is master light.

- ◆ Auto-run mode, press "AUTO", Then it is master light.

1. 4. Master Light

- The fixture becomes master light at the following cases.

At "STAT"

At "AUTO"

At "EDIT"

Uploading programs at "UPLD" under "SET"

1. 5. Multi-lights working Synchronously

When using a controller to control more lights and use the strobe and auto-run function, the controller can only send data, strobe and auto-run program are determined by the lights themselves. Oscillator frequency for each light is not exactly the same, so if you don't control them, the lights might not work synchronously after a long time. Anyway, we can solve this problem.

1) In actual usage, all lights might be powered on at different time, and the connection to controller might be at different time too, then they might be not able to work synchronously. If this happens, change the


value of the push on controller, for example, push the putter from 20 to 0, then push back to 20, then they will work synchronously.

2) Using a controller to edit the strobe and programs, they will work synchronously.

3) Lights under master/slave mode will work synchronously.

2. Operating Instructions

2. 1. Display information

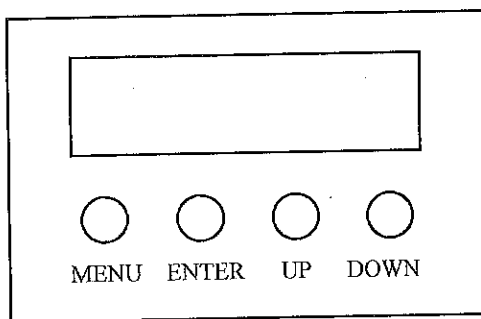

2. 1. 1. Basic Usage

【MENU】 Main Menu Select or Exit

【ENTER】 Enter or Choose the Submenu

【UP】 Menu Select or data Increase

【DOWN】 Menu Select or data Decrease


2. 1. 2. Key Pass Word


【UP、DOWN、UP、DOWN】 + 【ENTER】

Press 【UP】, then press 【DOWN】, then press 【UP】, then press 【DOWN】, then press 【ENTER】 to confirm

2. 2. Menu Navigation




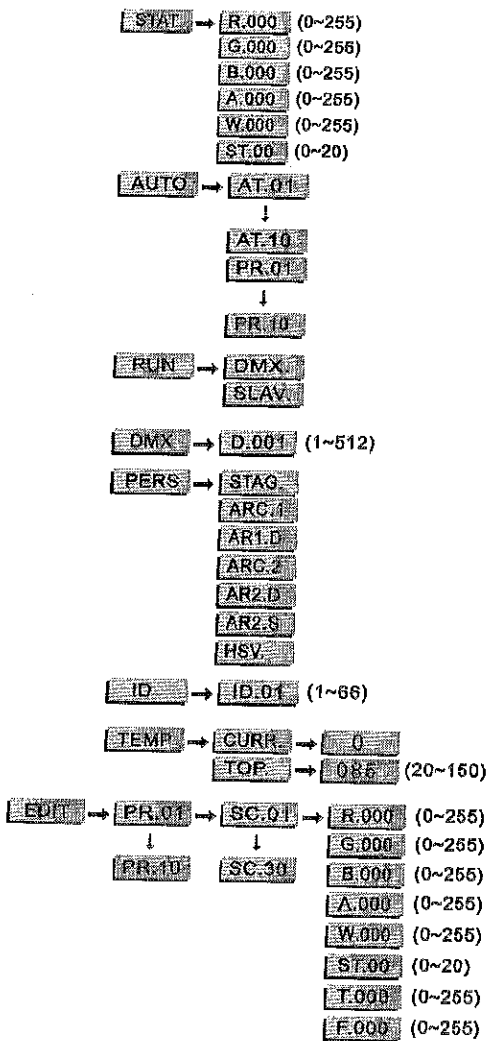

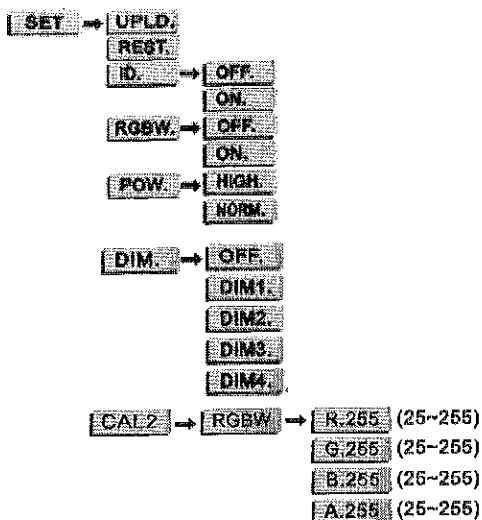


2. 3. Menu Description

2. 3. 1. Static Mode (STAT)

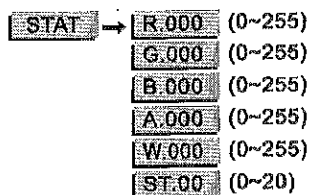


At【STAT】,press【ENTER】to enter static mode, then the light is master light
 Press 【ENTER】 to choose the submenu: 【Red】、【Green】、【Blue】【Strobe】
 Press 【UP】 / 【DOWN】 to choose the value
 Press 【MENU】 to exit, then it comes to external control mode

2. 3. 2. Auto Mode

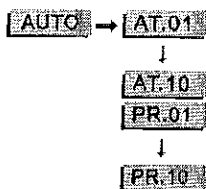

At【AUTO】,press【ENTER】to enter auto mode, then the light is master light
 Press【UP】/【DOWN】to choose the onboard program or the edited program
 Press【MENU】to exit, then it comes to external control mode

 2. 3. 3 Sound Control(SOUND)




At【SOUND】, press【ENTER】to enter Sound Control mode, then the light is master light

Press【UP】/【DOWN】to choose the【MOD1】or【MOD2】

Press【MENU】to exit, then it comes to external control mode.

 2. 3. 4. DMX and Slave Mode (RUN)



At【RUN】,press【ENTER】to enter, the the light is at external control mode

Press【UP】/【DOWN】to choose【DMX】or【SLAV】by a controller.

Press【UP】/【DOWN】to choose【1~512】, press【MENU】to exit.

【DMX】means the light can only controlled by a controller

【SLAV】means it only receives signal from master light


Press【MENU】to exit

2. 3. 5. DMX Setting (DMX)



At **【DMX】** , press **【ENTER】** to enter, then the light is controlled can be activated by DMX Channel 6.

2. 3. 6. DMX512 Mode Select (PERS)

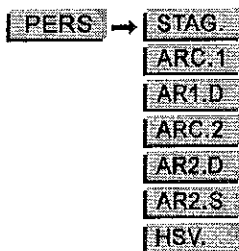

At **【PERS】** , press **【ENTER】** to enter, then it's controlled by an external controller.

Press **【UP】** / **【DOWN】** to choose the DMX working mode(check the channel list for the specific modes)

Press **【MENU】** to exit

 
2. 3. 7. ID Setting (ID)



At **【ID】** ,press **【ENTER】** to enter, then the lights can be controlled by an external controller.

Press **【UP】** / **【DOWN】** to choose **【1~66】**, press **【MENU】** to exit.

2. 3. 8. Over-temperature Protection (TEMP)



At **【TEMP】** Press **【ENTER】**, then the lights can be controlled by an external controller.


Press **【UP】** / **【DOWN】** to choose **【CURR】** or **【TOP】**

At **【CURR】** press **【ENTER】**, the current temp is shown (Notes: the temperature might not be accurate due to the material and location, it is

just for reference. Press **【MENU】** to exit.


At **【TOP】** press **【ENTER】**, set the temperature. (default 85 degree), press **【UP】** / **【DOWN】** to choose from (20~150), Press **【MENU】** to exit.

2. 3. 9. Scene Edit (EDIT)

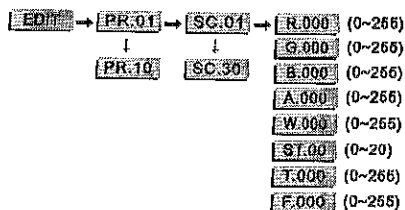

At **【EDIT】** press **【ENTER】**, then it can be edited and becomes the master light. Press **【ENTER】** to the submenu or data select, Press **【MENU】** to exit. Press **【UP】** / **【DOWN】** to choose the program, scene or data value. (See detailed information at Edit Instructions)

2. 3. 10. Setting (SET)

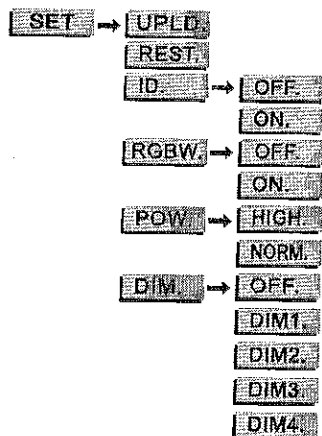

At **【SET】** Press **【ENTER】**, then the light exits the external control mode.

【UPLD】 means sending edited programs, press **【ENTER】** to enter the pass

word confirmation, then press【UP、DOWN、UP、DOWN】+【ENTER】, the light turns yellow, it means data is being sending, and it shows the sending process, after sending, the light turns green. Slave light will turn green after receiving. If it stays yellow, it means the data sending is failed.If this happens, power off the slave light and do it again.

【REST】means restore the factory default, press【ENTER】to enter, password: 【UP、DOWN、UP、DOWN】 + 【ENTER】


【ID】 means ID switch setting, press 【ENTER】 to enter,then press 【UP】 / 【DOWN】 to choose 【ON】 ID setting is allowed, 【OFF】 ID setting is forbidden.

【RGBW】 means color adjustment, press 【ENTER】 to enter, then press 【UP】 / 【DOWN】 to choose 【ON】 color adjustment is allowed, or 【OFF】 forbidden. RGB ratio can be setting under 【CAL2】

【POW】 means power setting, press 【ENTER】 to enter, press 【UP】 / 【DOWN】 to choose 【Normal】 or 【High】, 【Normal=33%】, 【High=100%】

【DIM】 means non-linear dimming speed setting,press 【UP】 / 【DOWN】 to choose, 【OFF】 means close the function of dimming speed, 【DIM1】 means speed1(fastest), 【DIM2】 means speed 2, 【DIM3】 means speed 3, 【DIM4】 means speed 4(the slowest), The slower the speed, the smoother the dimming.

2. 3. 11. White Balance Setting (CAL1)

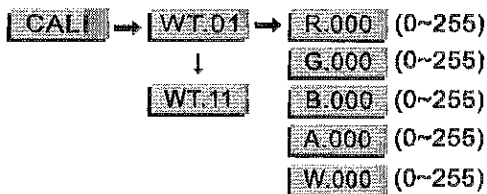

At 【CAL1】,press 【ENTER】 to enter, then the light is at the mode of external control


Press 【UP】 / 【DOWN】 to choose 【White 1~11】,press 【ENTER】 to set.

Press 【ENTER】 to choose 【Red】、【Green】、【Blue】、【Yellow】 , 【White】

Press **【UP】** / **【DOWN】** to choose **【0~255】**

Note: When it is in DMX mode **【STAG】**, These 11 white balance

2. 3. 12. Color Adjustment (CAL2)

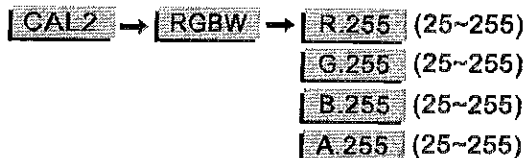


At **【CAL2】** press **【ENTER】** to enter **【RGBW】**, then the light is at the mode of external control

Press **【ENTER】** to choose **【Red】**, **【Green】**, **【Blue】**, **【Yellow】**

Press **【UP】** / **【DOWN】** to choose the color ratio **【25~255】**

 2. 3. 13. Key Protection Setting (KEY)



At **【KEY】**, press **【ENTER】** to enter, then the light is at the mode of external control

Press **【UP】** / **【DOWN】** to choose **【ON】** / **【OFF】**

If you choose **【ON】**, the keys will be locked once the light is in protection mode. Even if you restart it again, they will be still locked. For unlocking, please press the pass word **【UP、DOWN、UP、DOWN】** + **【ENTER】**

If you choose **【OFF】**, the keys will be never locked.

2. 4. Controller Operation

2. 4. 1. DMX Channels

7 DMX working modes: **【STAG】**, **【ARC.1】**, **【AR1.d】**, **【ARC.2】**, **【AR2.d】**, **【AR2.S】**, **【HSV】**

STAG Mode

CH	Value	Function
1	0~255	Dimming
2	0~255	Red (when at CH8,if PR01~10 is chosen, CH2 controls TIME)
3	0~255	Green (when at CH8,if PR01~10 is chosen, CH3 controls FADE)
4	0~255	Blue
5	0~255	Amber
6	0~255	White
7	0~5	No funtion
	6~20	High power (only when in NORMAL POWER model)
	21~30	No function
	31~255	Color Change (see color list)
8	0~10	No strobe
	11~255	Strobe speed (255 the fastest)
9	0~20	No function
	21~30	Inbuilt program 1
 (each 10 values for one program)
	110~120	Inbuilt program 10
	121~130	Editable program 1
 (each 10 values for one program)
	211~220	Editable program10
	221~255	Sound Control 1 & 2
10	0~255	Editable program speed adjust (CH2、CH3)

11	0~9	Dimming speed (0~9 is the speed at menu"set")
	10~29	Close
	30~69	Speed 1 (fast)
	70~129	Speed 2
	130~189	Speed 3
	190~255	Speed 4 (slow)
12	0~9	ID no function
	10~19	ID1
 (10 values is for one ID)
	200~209	ID20
	210	ID21
 (10 values is for one ID)
	254	ID65
	255	ID66

ARC.1 Mode

CH	Value	Function
1	0~255	Red
2	0~255	Green
3	0~255	Blue

AR1.d Mode

CH	Value	Function
1	0~255	Dimmer
2	0~255	Red
3	0~255	Green
4	0~255	Blue

ARC.2 Mode

CH ^o	Value ^o	Function ^o
1 ^o	0~255 ^o	Red ^o
2 ^o	0~255 ^o	Green ^o
3 ^o	0~255 ^o	Blue ^o
4 ^o	0~255 ^o	Yellow ^o
5 ^o	0~255 ^o	White ^o

ARC.2 d Mode^o

CH ^o	Value ^o	Function ^o
1 ^o	0~255 ^o	Dimmer ^o
2 ^o	0~255 ^o	Red ^o
3 ^o	0~255 ^o	Green ^o
4 ^o	0~255 ^o	Blue ^o
5 ^o	0~255 ^o	Yellow ^o
6 ^o	0~255 ^o	White ^o

AR2.S Mode^o

CH ^o	Value ^o	Function ^o
1 ^o	0~255 ^o	Dimmer ^o
2 ^o	0~255 ^o	Red ^o
3 ^o	0~255 ^o	Green ^o
4 ^o	0~255 ^o	Blue ^o
5 ^o	0~255 ^o	Yellow ^o
6 ^o	0~255 ^o	White ^o
7 ^o	0~10 ^o	No strobe ^o
^o	11~255 ^o	Strobe speed (255 fast) ^o

HSV Mode

CH	Value	Function
1	0~255	H (hues) (0~100%)
2	0~255	S (saturation) (0~100%)
3	0~255	V (value) (0~100%)

2. 4. 2. Color List

CH Value	Function
31~50	R 100% / G ,up / B 0% / W 0%
51~70	R,down / G 100% / B 0% / W 0%
71~90	R 0% / G 100% / B, up/ W 0%
91~110	R 0% / G,down / B 100% / W 0%
111~130	R,up / G 0% / B 100% / W 0%
131~150	R 100% / G 0% / B,down / W 0%
151~170	R 100% / G,up / B,up / W 0%
171~190	R,down / G,down / B 100% / W 0%
191~200	R 100% / G 100% / B 100% / W 100%
201~255	Color trempreature (adjust at 【CAL1】) 5 value is for one. for example. 201~205: 3200K 206~210: 3400K 211~215: 4200K 216~220: 4900K 221~225: 5600K 226~230: 5900K 231~235: 6500K 236~240: 7200K 241~245: 8000K 246~250: 8500K 251~255: 10000K

3. Edit Instructions

Max 10 programs can be edited, each program has 30 scenes, each scene

has 8 functions : R-red, G-green, B-blue, Y-yellow, W-white, ST-strobe, T-timing, F-fading time. For better understanding on the functions, we provide an example as follows:

Scene	R	G	B	Y	W	ST	T	F	Effect
SC.01	255	0	0	0	0	0	2	2	R,gradual brighter (2 sec)
SC.02	0	0	0	0	0	0	2	2	R,gradual dim off
SC.03	0	255	0	0	0	0	4	2	G,gradual brighter (2 sec), stay for 2 sec
SC.04	0	0	0	0	0	0	4	2	G, stay for 2 sec, then dim off (2 sec)
SC.05	0	255	255	0	0	0	2	2	GB,gradual brighter
SC.06	0	0	255	0	0	0	2	2	G,dim off; B,stay
SC.07	255	0	0	0	0	0	2	2	R gradual brighter, and B dim off
SC.08	255	0	0	0	0	0	1	0	R, stay for 1 sec
SC.09	0	255	0	0	0	0	1	0	From R step change to G, G stay for 1 sec
SC.10	0	0	255	0	0	0	1	0	from G step change to B, B stay for 1 sec
SC.11	0	0	0	0	0	0	1	0	Off for 1 sec
SC.12	255	255	255	0	0	2	5	0	RGB strobe
.....	0	0	0	0	0	0	0	0	Scenes with time of 0 will not work, until the next (not 0) turns up.

Fading is determined by two scenes beside each other, the effect can only be seen when the whole program is running.If the timing value is 0,this scene will be ignored. If the fading time is longer

than timing time, the timing time will become the fading time.

Strobe and fading time can be set together.

If you are not familiar with the setting, please take notes on paper, then set according to what you write, check the effect, and adjust the value.

EDIT is not difficult, you can start from the easy ones, then try the complex ones. Once you master it, you will find it very helpful.

When you reset the default function under "SET", the edited programs will be still there.