# **LED PROFILE WASH 100**USER MANUAL

Model: W-1550Z

Model: W-1550Z LED PROFILE WASH 100 USER MANUAL



## **TABLE OF CONTENTS**

INSTRUCTION2				
DESCRIPTION OF THE DEVICE2				
1. Profile2				
2. Overview2				
3. Specification data2				
4. Photographic chart3				
5. Safety warning3				
Warning3				
Note3				
INSTALLATION4				
1. Installing4				
2. DMX 512 connection5				
3. Connection with mains6				
4. The use of shuttle plate6				
5. Zoom7				
6. Dimmer7				
7. Replacing fuse7				
OPERATION7				
1. Description of the keys7				
2. Menu8				
3. Basic setting9				
4. DMX protocol10				
APPENDIX11				
Problem and solution11				

#### USER MANUAL

LED PROFILE WASH W-1550Z

#### INTRODUCTION

Thank you for having chosen a led profile wash 100, You will see you have acquired a powerful and versatile device.

Unpack your led profile wash 100

Delivery includes

The shuttle plate 1PC (Optional)

DMX CABLE 1PC
Power wire 1PC
USER MANUAL 1PC


#### **DESCRIPTION OF THE DEVICE.**

#### 1. Profile

With the idea of enegy saving and environment protection, the device use lower power loss and extremely high efficiency led. The device housing cover is made of used the new high strength heat resistance engineering plastics, with beautiful shape and smooth lines. The designing and manufacturing is in compliance with the IEC standard. The device is suitable in the large-scale theatrical performance, the theater, the performance hall, the bar, night club and so on.

The product conforms to the international standard DMX512 agreement completely, the device can be controlled in single, and also be controlled in many units.

#### 2. Overview

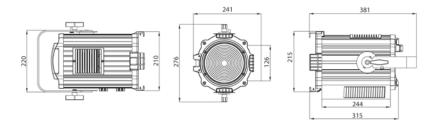

#### 3. SPECIFICATION

Power supply: AC100V-240V, 50Hz/60Hz,

Power consumption: 150W

Lamp: COB Led 100W, white

● Luminous flux: 7000lm - 8000lm

• Lifetime of led: more than 50000hours

• Color temperature: 3200k and 5600k are available

USER MANUAL 11 LED PROFILE WASH W-1550Z

## APPENDIX Problem and solution

Problem	Reason	Resolution	
		AC100V-240V,50HZ/60HZ	
		Check the power connection, and	
		make sure device connect the mains	
Device not work	No power	in well condition.	
		Check if switch is on	
		Check if the fuse is good	
Led bulb is off	led bulb damaged	Replacing led bulb	
	Led driver board damaged	Replacing led driver board	
	temperature swtich damaged	Replacing temperature switch	
Fans not work	Fans damaged	replacing fans	

#### Caution:

- Unqualified person involved with installation, operation and maintenance of this device is prohibited.
- If any above mentioned problem happened, or unknown problem happened, please contact manufatory or distributor for assistance.

## USER MANUAL 10 LED PROFILE WASH W-1550Z

#### Display adjusting

Use"UP" key to select [Display], press "ENTER" key to confirm,

Display time setting, it shows [Display Mode], press "ENTER" to confirm. Use"UP" or "DOWN" key to select [5,10,30,60] second, meaning display will turn off automatically 5,10,30,60 seconds after last press any key o the control board, or select [On] to keep the display on, then press "ENTER" key to confirm and return to the main menu.

Display brightness setting
 Use"UP" key to select [ Display Level], press "ENTER" to confirm, use "DOWN" or "UP" key
 to select [0—255], then press "ENTER" key to confirm and return to the main menu.

Check equipment data

Use "up" key to select [Display], press "ENTER" key to confirm, use "up" key to select [Info], then you can check the unit information such as led bulb temperature [Led Temp ###], unit working hours [Hours #####], unit serial number [Serial ########], and unit version [Sftver #.#]. Then press "ESC" key to return to the main menu.

#### 4.Dmx protocol

EFFECT	NUMERIC	CHANNEL	
Dimmer intensity 0-100%	000—255	1	1
Shutter open	0	2	
Strobe effect with increasing speed	1—127		
Sudden effect with increasing speed	128—159		
Pulse effect with increasing speed	160—191		
Random effect with increasing speed	192—255		

#### USER MANUAL 3 LED PROFILE WASH W-1550Z

CRI: ≥85Ra or ≥95Ra

Dimmer: 0-100% linear dimmer

Beam angle: 15°- 55°

Zoom: adjusted by manual

• Strobe: 1-20 flash per second

• High quality radiator, fan without noise

Lcd display

Control mode: international standard dmx512 signal,

with XLR 3PIN and XLR 5PIN connectors

• Channel mode: 1 channel mode and 2channels mode


IP20


● Environment temperature: -20°C —45°C

• Net weight: 5.8kgs • G.W.: 7.5 kgs

Dimensions (LxWxH): 425x315x320mm

### 4. Photographic chart

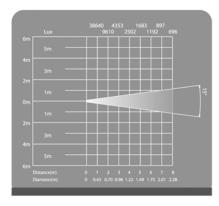

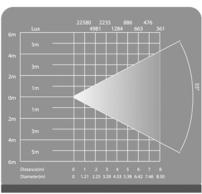

#### 5. Safety warning

#### 1 Warning:

- Every person involved with the installation, operation and maintenance of this device has to be qualified
- User must follow the instructions of this manual
- Unqulified person can not open the housing cover and operate the device, or the dealer will not accept liability for any resulting defects or problems.
- The device against rain and moisture

#### 2 Warning notes:

- Power supply: AC100V-240V,50HZ/60HZ
- Make sure the power switch is off, the power plug, outlet and the earth conection is in


well condiction before connecting the device with the mains.

- Please use qualified power plug and outlet. Never connect the power cord of this device with other electrical equipment.
- During move and installation, make sure the device not crashed with metal parts and other tough materials.
- Always disconnect from the mains, when the device is on installation and dismantled
- The minimum distance between light-output and the illuminated surface must be more than 50cm.
- The device must only be installed on a non-flammable surface. In order to safeguard sufficient ventilation, leave 50 cm of free space around the device. Please note that heat -sensitive objects may be deformed or damaged by the emitted heat.
- During the operation the housing becomes very hot! Do not operate the device for 15 minutes after switching off.
- $\bullet$  The maximum ambient temperature Ta = 45°C must never be exceeded. The maximum housing temperature Tb = 80°C must never be exceeded.
- For indoors use.
- Replace any visible cracked protective shield, filters and lens.
- The protective shield, filters and lens will require weekly cleaning as smoke Cfluid tends to building up esidues, reducing the light Coutput very quickly.

#### INSTALLATION

#### 1. Installation

- When installation, keep the device far away the heat sensitive objects and explosives sensitive objects, leave at least 50CM of free space around the device.
- When the device put on horizontal place, the device must be placed directly on the place, and devices must be secured with a mounting holder.

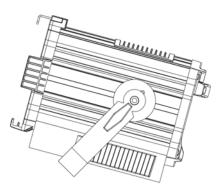

• When rigging the devices on the truss and the head face to the floor. Insert the guick-

#### Important notice:

This equipment is dimming DMX512 signal priority, when the input signal, the "ManDim" is invalid; as in the menu by light, please cut off the input DMX512 signal!

#### 3. Basic setting.

- The display will show address and other information when the unit is powered on;
- Address setting

Press "ENTER" key to enter main menu, it will show message [Dmx Adr 001], press "ENTER" key to enter, use "DOWN" or "UP" key to select required address [001 – 511] and press "ENTER" to confirm and return to main menu;

#### Setting when unit loss singal

Press "UP" key to enter menu and select [Dmx Loss], press "ENTER" key to confirm, use the 'UP" or "DOWN" key to select [Off] or [Hold], and press "ENTER" to confirm and return to main menu;

#### Reset function

Use "UP" key to select [Reset System], press "ENTER" key to run reset, it will show [Reset Waiting] meaning the unit run reset function, when it shows [Reset Done] meaning the unit finishes the reset function. Press "ESC" key to return to main menu;

#### Master and slave setting

Use "UP" key to select [Master], press "ENTER" key to confirm, use "DOWN" or "UP" key to select [Master Off] or [Master On], then press "ENTER" key to confirm and return to main menu.

#### Demo

Use "UP" key to select [Perform], press "ENTER" key to confirm, use "DOWN" or "UP" key to select [000---002], press "ENTER" key to confirm and return to main menu.

#### Mode setting

Use"UP" key to select [Channel], press "ENTER" key to confirm, use "DOWN" or "UP" key to select [2-Chn] or [1-Chn], press "ENTER" key to confirm and return to main menu.


#### Manual dimmer

Use"UP" key to select [Main Dim], press "ENTER" key to confirm, use"DOWN"or "UP" key to select [0--255], press "ENTER" key to confirm and return to main menu.

#### Fan setting


Use"UP"key to select [Fan], press "ENTER" key to confirm, use"DOWN" or "UP" key to select [Fan Auto] or [Fan On], press "ENTER" key to confirm and return to main menu.

#### 2. Menu

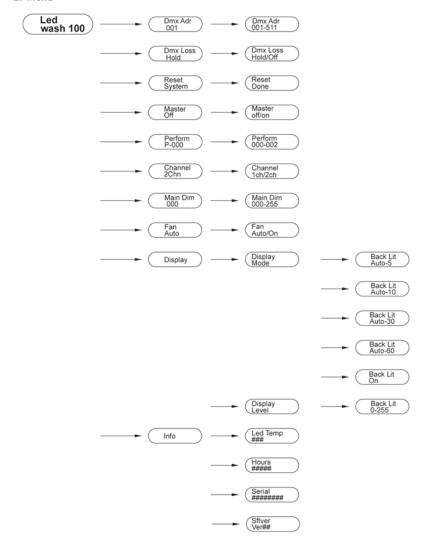

## USER MANUAL 5 LED PROFILE WASH W-1550Z


lock fasteners of the first mounting holder into the respective holes on the bottom of the device. Tighten the quick-lock fasteners fully clockwise. Install the second mounting holder. And the safety rope must be used at same time.

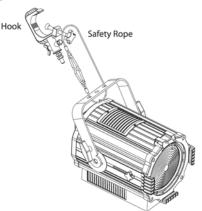

• Please use qualified safety-rope, which can hold at least 10 times the weight of the fixture. You must only use safety-ropes with quick links with screw cap. Pull the safety-rope through the hole on the bottom of the base and over the trussing system etc. Insert the end in the quick link and tighten the fixation screw. A safety rope which already hold the strain of a crash or which is defective must not be used again.

#### 2. Dmx512 connection


• Please use xlr-xlr wires connect the dmx output of the controller with the dmx input of the first device, and connect the dmx output of the first device with the dmx input of the second device, always connect one output with the input of the next device until all devices are connected.

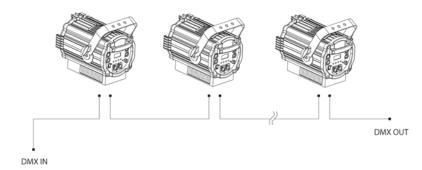

Please use qualified xlr-xlr dmx cables.

## 3.Connection with mains

- The person involved with the power connection must be qualified, and has the electrical engineering certificate.
- Connect the device to the mains with the power plug.
- The earth has to be connected.
- Power consumption 150W, input power supply AC100V-240V, 50/60Hz

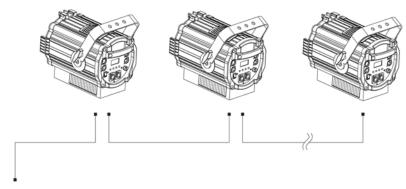


AC100V-240V,50/60HZ

**Important note:** the specification of power line is 3G1.5 with a maximum current 13A, when power is 200V-240V, use grey plug power interconnection on the device, each group do not exceed 16 sets of equipment; when power is 100V-120V, each interconnect please do not exceed 8 sets of equipment!

#### 4. The use of shuttle plate


● Take out the shuttle plate, operation followed by the overview 。

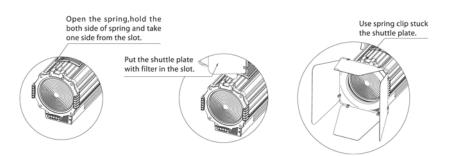

## USER MANUAL 7 LED PROFILE WASH W-1550Z

#### 5. Zoom

• Shown in the figure, loosen the handle, to move it forward or back ward to get needed spot size, then tighten the handle handle!

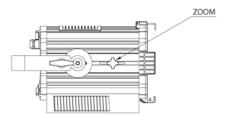

#### 6. Dimmer

●This equipment is dimming is 0-100% linear dimming, which can be adjusted through DMX512 signal, in the absence of DMX signal can be adjusted through the device menu "ManDim"! But the dimming DMX512 signal is priority, when signal input, manual dimming is invalid, in order to realize manual light, you must disconnect DMX-input!

#### 7. Replacing fuse

- Before replacing the fuse, unplug mains lead.
- Procedure:

Step 1: Unscrew the fuseholder on the rearpanel with a fitting screwdriver from the housing (anti-clockwise).

- Step 2: Remove the old fuse from the fuseholder.
- Step 3: Install the new fuse in the fuseholder.
- Step 4: Replace the fuseholder in the housing and fix it.

#### **OPERATION**

#### 1. Description of the keys

- ESC;
- ENTER;
- DOWN;
- UP.

