
USER MANUAL

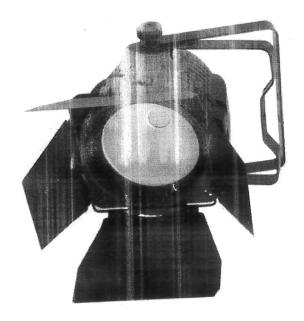

200W COB 2in1 LED PAR

1. Safety instructions

Please confirm the same voltage to the light.

expand the light in wet or rain day, to avoid fire or damaged light. The light couldn't be water-proof, it only allow to be used in door. Don't

Please confirm there is no flammable material around the light

around approach material. To check the air passage is ok at any time. The light must be set up the ventilating place. The distance is ≥51cm

The Maximum temperature is $\leq 40^{\circ}C(104^{\circ}F)$.

When the lights have problems, please stop to use to contact the

supplier. Don't repair it by yourself!

Don't connect by a dimmer

To confirm the power wire is straight and non-damaged

Don't pull it directly.

Don't look at the bulb when the light is working to avoid any hurt.

2.1 Fixture linking

the lights can be connected by signal wire which the distance is \leqslant When you control the light's master/slave or DMX 512 signal agreement, DMX light pair to segregate the signal zoom equipment, in order to 500m, The maximum connect lights are 32pcs more or less, and adapt won't affect by the signal wire's length protect the light's signal won't be interrupted by other signal. Moreover, it

Data connect

Data cable is connected by DMX data wire, and XLR. Please use hi-quality data cable signal wire, it won't be interrupted by magnetic

Characteristics of DMX data cable

2 conductors' double tree lace and shield

The maximum capacitance of the conductors-30 pF/ft

The maximum capacitance of the conductor and shield -55 pF/ft.

The maximum resistance is 20 ohms/1000ft

The nominal impedance 100-140 ohms

Cable wire's adapter:

 
optocoupler segregate signal zoom equipment's 3 pin(5 pin) XLR plug. 3 XLR plug, which is correspond the lights or DMX controller, DMX The two sides of signal cable wire is consisted of 1 pair female and male

 
3-Pin to 5-Pin conversion chart

need to use a 5pin to 3 pin adapter Note! If you use a controller with a 5 pin DMX output connector. You will

CHAUVET Model No: DMX5M. Or DMX 5F

The chart below details a proper cable conversion:

 













DMX-input



3. Operation instruction

 3.1 menu configure



Use "MENU" button to back Use "ENTER" button to go on Use "DOWN" button to move down Use "UP" button to move up When navigating the menu:

3.2 Menu navigation

_	Sound Music activate Manual adjust	CC00 Color change,	EE00 Pulse col	FF00 Color fading,	d001 6CHs A	A001 6CHs A	Display
Adjust brightness by UP or DOWN	Music activate Manual adjust of cool white, (B000—B255)	Color change, Color change speed by UP or DOWN	Pulse color change, (EE01—EE99) Speed of color change by UP or DOWN	Color fading, (FF01—FF99) Color fading fast by UP or DOWN	6CHs Address Code, (d001—d512) Change the address code by by UP or DOWN	6CHs Address Code, (A001—A512) Change the address code by UP or DOWN	Function

4. DMX channels

A001 mode

Channel	Value	Function
	0-255	Dimmer, linear dimmer 0-100%
		Strobe
2	0-255	0-9 no function;
		10-255 strobe from slow to fast
⟨ 2	0-255	Stand alone
.4.	0-255	Stand alone speed

ග	Ŋ	
0-255	0-255	
Warm White, linear adjustment 0-100%	Cool White , linear adjustment 0-100%	

D001 mode

 Channel	Value	Function ·
_	0-255	Dimmer, linear dimmer 0-100%
2	0-255	Cool White, linear adjustment 0-100%
ω	0-255	Warm White , linear adjustment 0-100%
		Strobe
4	0-255	0-9 no function;
		10-255 strobe from slow to fast
5	0-255	Stand alone speed
6	0-255	Stand alone

5. specifications

Input voltage: AC100-240V 50/60Hz Power: 200W

LED: 200W COB 2in1 white LED

Color tempreature:3200K - 5600K

Beam angle: 60 degree

Lifespan: min 50,000hours

Control mode: DMX, Master/slave, Auto-run, sound

DMX Channel: 6CH/6CH

Dimmer: 0-100% smooth linear dimmer

Strobe: 1-20 times/sec

IP Rating: IP20,

Housing: die-cast aluminum

Data input/output:3 pin XLR

N.W.:4.7 KG G.W: 6.7 KG

Size: 240x240x340mm

6. Remark

The product has perfect performance and integrity packing. All users should be strictly complying with the warning and operating instructions as stated. Or we aren't in charge of any result by misusing. Any damage resulting by misuse is not within the Company's warranty. Any, fault or problem caused by neglecting the manual is also not in the charge of dealers.

Errors and omissions for every information given in this manual excepted. All information is subject to change without prior notice.

S